
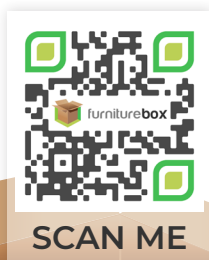


ROMERA TV STAND

ASSEMBLY GUIDE

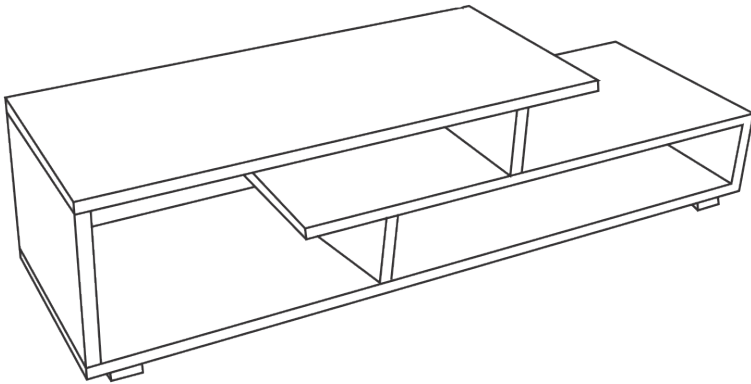

www.furniturebox.co.uk

Scan QR code for more tips, advice and
assembly video or visit
furniturebox.co.uk/club/romera-TV-stand



Important - Please read these instructions fully before starting assembly



**SAFETY AND
CARE ADVICE**



NO POWER TOOLS

SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre



IMPORTANT INFORMATION



30 MINUTE
BUILD




TWO
PERSON



MAXIMUM
CAPACITY 100Kg

PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

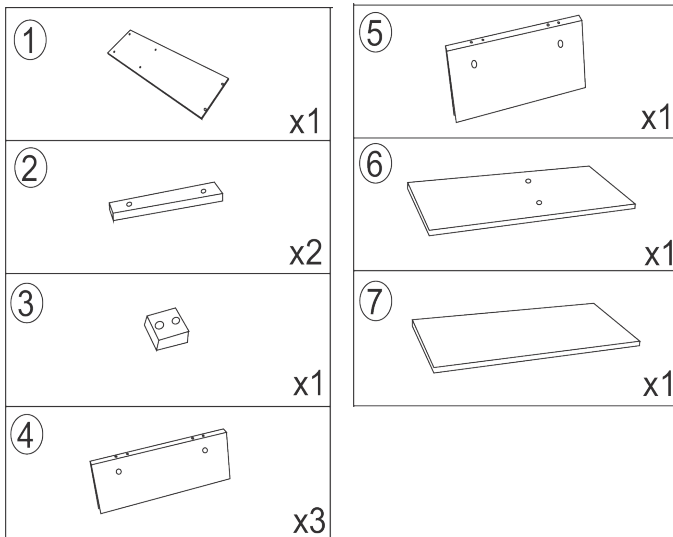



A		x14	C		x8	E		x16	G		x8
B		x6	D		x22	F		x8	H		x1

NOTE: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

STEP 1

Use a clear, flat, soft surface to avoid bumps or scratches.

Place bottom panel [1] upside down on the floor and attach feet blocks [2] and [3] using washer [A] followed by screw [B] in each hole. Tighten with Allen key [H]

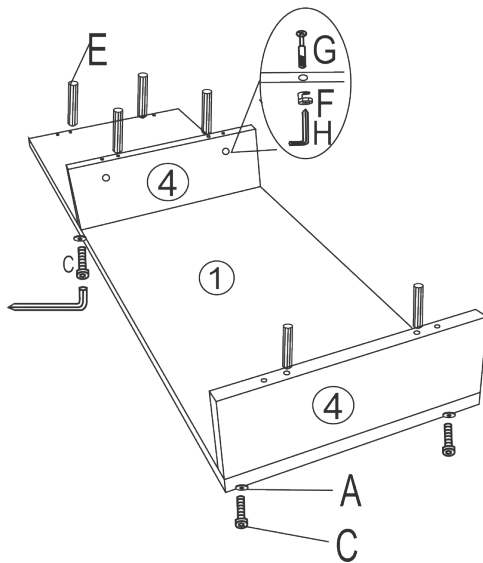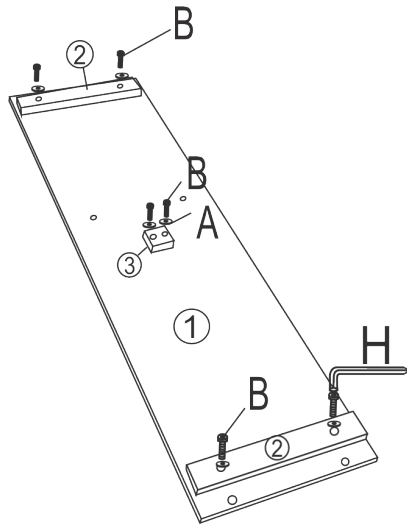

STEP 2

Turn over bottom panel [1] so it rests on its feet.

Attach side 2 x side panels [4] in locations shown on diagram, using 2 x washer [A] followed by 2 screw [C] inserted from bottom upwards into panel. Tighten with Allen key [H].



Insert 2 x wooden dowel [E] and 2 x cam bolt [G] into the thin edge of each side panels. Add cam bolts [C] into holes on the sides of the panels. Take care to put dowels and bolts in their correct holes. Don't tighten the cam nuts yet.

Add 2 x wooden dowels into the inner holes on the far end of bottom panel [1].

STEP 3

Attach side panel [5] to the bottom panel and secure with washer [A] followed by screw [C] inserted from bottom upwards into panel. Tighten with Allen key.

Add 2 x wooden dowels and 2 x cam bolts [G] to the top thin edge of side panel [5]. Add cam nuts [F] in corresponding holes. Don't tighten the cam nuts yet.

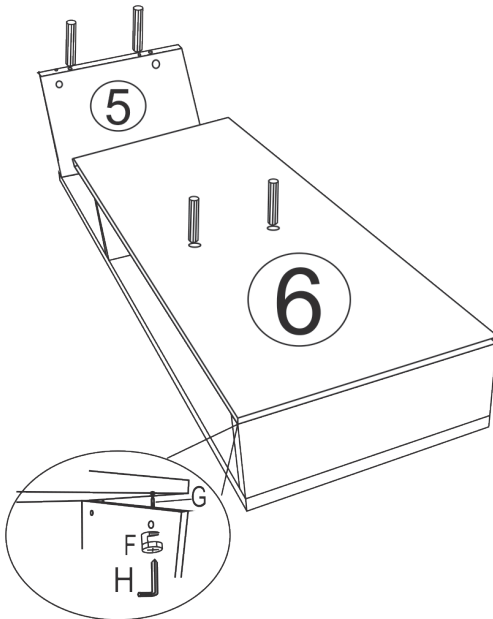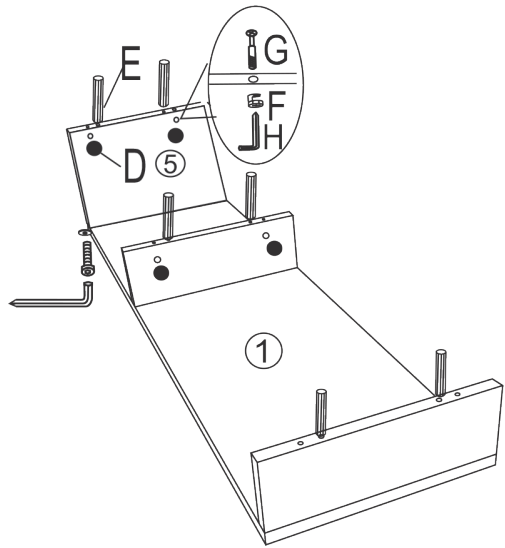

STEP 4

Add shelf [6] - carefully align holes in shelf with dowels and cam bolts.

Add 2 x wooden dowels into the top of shelf panel [6].

Tighten the cam nuts below shelf [6] to secure it into place.






STEP 5

Add another side panel [4] on top of shelf [6].

Add 2 x wooden dowels and 2 x cam bolts into the thin edge of the side panel.

Pop cam nuts into the corresponding holes in the side of panel [4]

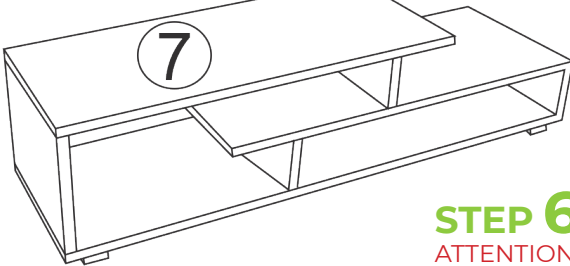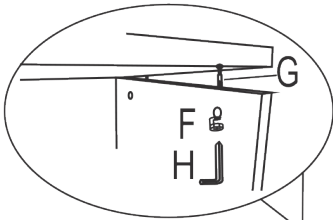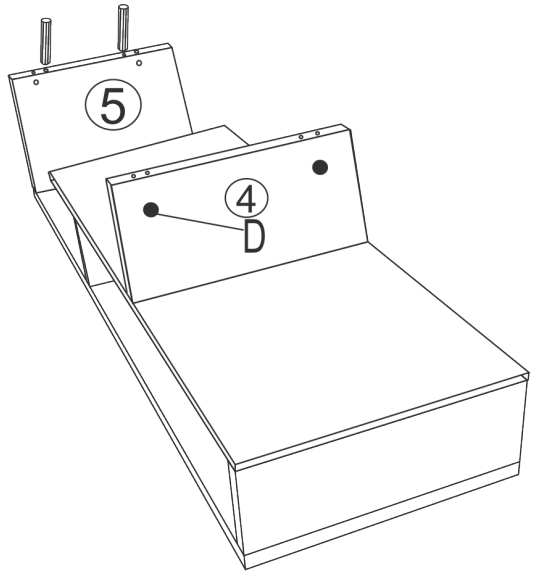

STEP 6

ATTENTION: Carefully align top panel [7] with the dowels and cam bolts.

Tighten the cam bolts.

Cover all cam nut holes with stickers [D].
Your TV stand is now ready to use.

LOOKING GOOD!

Now you've assembled your product find out how to care for your item and keep it looking brand new.



Look for your care guide in the box or visit:
www.furniturebox.co.uk/club/care-guide



OUR 1 YEAR GUARANTEE

our products come with a 1 year guarantee to give you peace of mind shopping at Furniturebox



WHAT THE GUARANTEE COVERS



PRE-INSERTED FIXINGS

e.g. lose metal threads



FAULTY JOINTS

e.g. legs bending



EXTERNAL FIXING FAULTS

e.g. metal discs removing from table top



STRUCTURAL INTEGRITY

e.g. the frame of the product



ACTIVATE YOUR GUARANTEE ONLINE

scan this QR code with your phone to read the full guarantee online and register your product. It only takes a moment to fill out. Or visit: furniturebox.co.uk/our-guarantee

Furniturebox UK, Beaumont Business Centre,
Woodlands Road, Mere, Wiltshire, BA12 6BT
Tel: 01747 863333 Email: sales@furniturebox.co.uk