

# AZURE SINGLE





#### Important - Please read these instructions fully before starting assembly





#### SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre




Follow us on Instagram @furniturebox\_uk

#### **IMPORTANT INFORMATION**



## PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

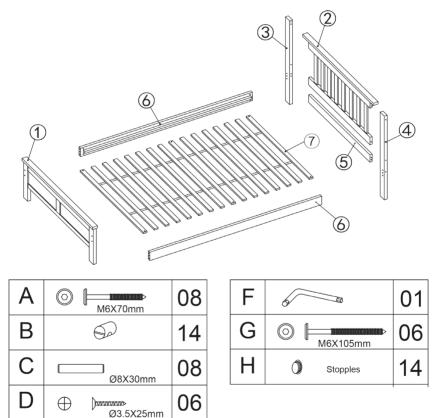


**NOTE:** The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



#### STEP

Use a clear, flat, soft surface to avoid bumps or scratches.

Construct the headboard first. Take headboard piece [2] and support piece [5] and insert 4 x wooden dowels [C] as indicated in diagram.

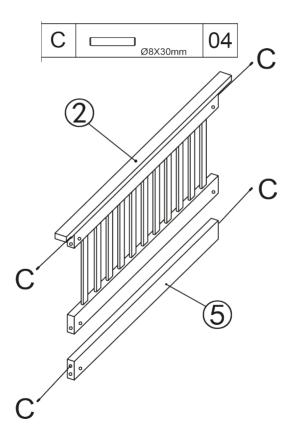




Follow us on Instagram @furniturebox\_uk

#### FULL ASSEMBLY INSTRUCTIONS

### STEP 2


Next, attach side pieces to headboard.

Take side supports [3] and [4] and slot onto dowels in headboard [2] and support piece [5]. Screw it all together using 6 x bolts [G] and 6 x cam locks [B] as per the diagram. Use Allen key [F]

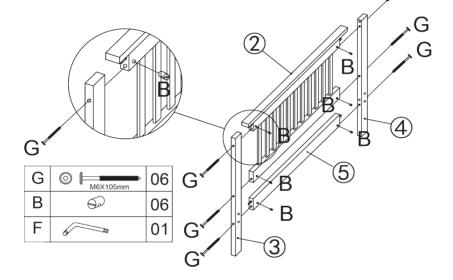

### STEP 3

Take 2 x side pieces [6] and add 4 x dowels [C] into the ends as per diagram -1 dowel either end of each side piece.

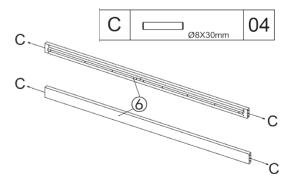




### STEP 4

Construct bed frame.

Align headboard [2], footboard [1] and side pieces [6] - get all the pieces into correct position before screwing anything together. Connect side pieces to headboard and footboard with 8 x bolts [A] and 8 x cam locks [B] - 2 at each end, on both sides.

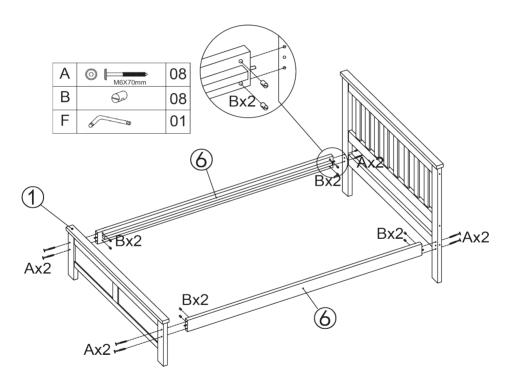



Follow us on Instagram @furniturebox\_uk


#### FULL ASSEMBLY INSTRUCTIONS


#### STEP 5

Place slats runner [7] onto frame as per diagram. Screw slats into place using 6 x screw [D]

Finally, cover all exposed holes on outside of frame with stoppers [H] - x 4 in total.

ATTENTION: Should you need to move the bedframe after assembly, carefully lift and re-position it with the help of at least one other person. Do not attempt to drag the frame, or you could risk damaging the structure.

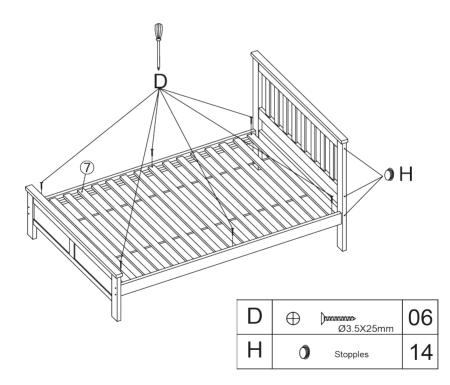

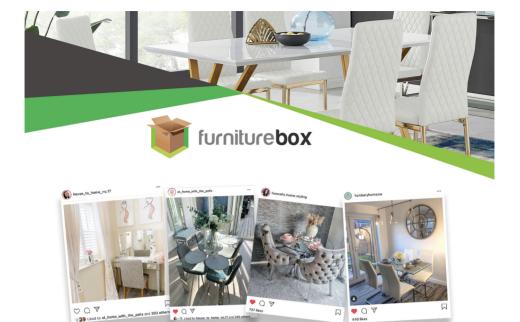

## WE **LVE** INTERIORS! SHARE YOURS WITH US ON SOCIAL MEDIA

follow us on Instagram
post your interior
tag us to be featured









## LOOKING GOOD!

Now you've assembled your product find out how to care for your item and keep it looking brand new.



www.furniturebox.co.uk/club/care-guide



#### **OUR 1 YEAR GUARANTEE**

our products come with a 1 year guarantee to give you peace of mind shopping at Furniturebox



## WHAT THE GUARANTEE COVERS



**PRE-INSERTED FIXINGS** e.g. lose metal threads



e.g. metal discs removing from table top



**FAULTY JOINTS** e.g. legs bending



e.g. the frame of the product



#### **ACTIVATE YOUR GUARANTEE ONLINE**

scan this QR code with your phone to read the full guarantee online and register your product. It only takes a moment to fill out. Or visit: furniturebox.co.uk/our-guarantee

Furniturebox UK, Beaumont Business Centre, Woodlands Road, Mere, Wiltshire, BA12 6BT Tel: 01747 863333 Email: sales@furniturebox.co.uk