

# OXFORD BEDSIDE TABLE

**ASSEMBLY GUIDE** 



www.furniturebox.co.uk

Scan QR code for more tips, advice and assembly video or visit furniturebox.co.uk/club/oxford-bedside



#### Important - Please read these instructions fully before starting assembly





#### SAFETY AND CARE ADVICE

- Check you have all the components and tools listed.
- Remove all fittings from the plastic bags and separate them into their groups.
- We do not recommend the use of power drills/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers and Allen keys.
- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Do not overtighten the nuts to avoid causing damage to the threads.

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre

### IMPORTANT INFORMATION






**PERSON** 



## PLEASE CHECK CAREFULLY AND MAKE SURE YOU HAVE ALL FITTINGS AND TOOLS LISTED BELOW BEFORE YOU START.

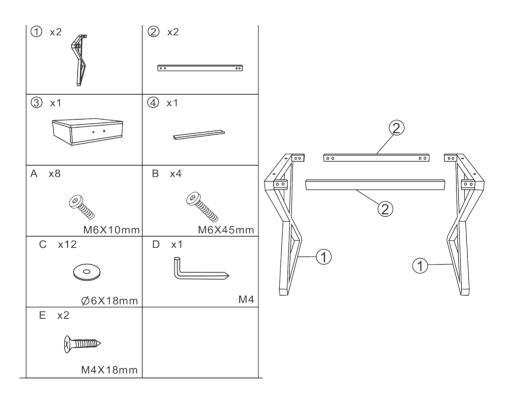


**NOTE:** The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.






Use a clear, flat, soft surface to avoid bumps or scratches.

First assemble the bottom chrome frame. Set out the end pieces [1] and cross bars [2] as per the diagram and align the holes.

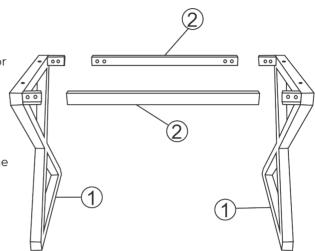

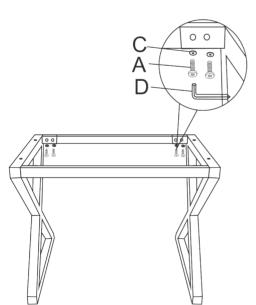



## STEP 2

Connect the end pieces [1] to the cross bars [2] using 2 x washer [C] followed y 2 x screw [A] in each corner. Tighten with Allen Key [D].

## STEP 3

Place the high-gloss drawer unit [3] upside down on the soft flat surface. Place the chrome frame onto the drawer unit [3] and align the holes. Connect the chrome frame to the drawer unit using 2 x washer [C] and 2 x screw [B[ on each side. Tighten with Allen Key [D].

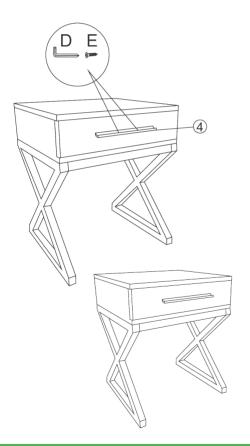

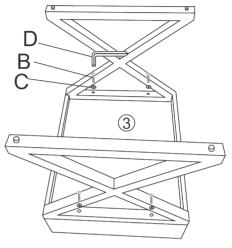

## STEP 4

ATTENTION: Carefully flip the bedside table the correct way up so it stands on its chrome legs.
Attach drawer pull handle [4] to the front of the drawer using 2x screws [E]. Tighten with Allen Key [D].





## WE LYVE INTERIORS! SHARE YOURS WITH US ON SOCIAL MEDIA

- 1. follow us on Instagram
  - 2. post your interior
- 3. tag us to be featured





@furniturebox\_uk



@furnitureboxuk

# **LOOKING GOOD!**

Now you've assembled your product find out how to care for your item and keep it looking brand new.




Look for your care guide in the box or visit: www.furniturebox.co.uk/club/care-guide



#### **OUR 1 YEAR GUARANTEE**

our products come with a 1 year guarantee to give you peace of mind shopping at Furniturebox

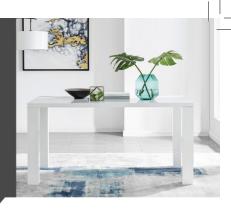

### WHAT THE GUARANTEE COVERS



**PRE-INSERTED FIXINGS** e.g. lose metal threads



**FAULTY JOINTS** e.g. legs bending



e.g. metal discs removing from table top



e.g. the frame of the product



#### **ACTIVATE YOUR GUARANTEE ONLINE**

scan this QR code with your phone to read the full guarantee online and register your product. It only takes a moment to fill out. Or visit: furniturebox.co.uk/our-guarantee

Furniturebox UK, Beaumont Business Centre, Woodlands Road, Mere, Wiltshire, BA12 6BT Tel: 01747 863333 Email: sales@furniturebox.co.uk